

Bandido creates products that generate harmony and warmth in each space where they are present. We hope you enjoy your new product and exceeds all your expectations.


You can get more information about the maintenance of your product and warranty by scanning the following QR Code.



B FASE

Floor Lamp

Instructions

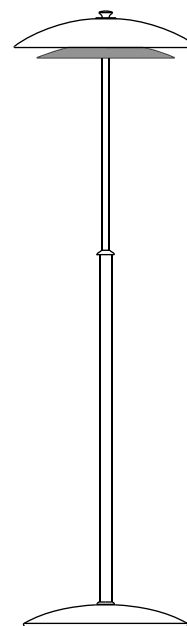

CDMX

Aristóteles 127
Polanco IV Sección Miguel Hidalgo
11550 CDMX, México

+52 555 087 2443

PUEBLA

Callejón del Cristo 2 Int. 6 A
Col. San José del Puente
72150 Puebla, Pue, México

+52 222 688 8442

Light Source

Optical LED Module 120°18W

2300lm / 120 V ~ 60 Hz 0.141 A

3000K

Included

Indoor Use

bandidostudio.com

Bandido

INDICACIONES DE USO

1 Unpack carefully. The materials are brittle and can easily crack.

2 Plug into an electrical outlet.

3 Use the button switch to turn on and off.

Spare Parts

- For LED module replacement, contact Bandido directly.



Handle with care, fragile materials.



The warranty is void if the luminaire is opened or internally modified.