

Bandido creates products that generate harmony and warmth in each space where they are present. We hope you enjoy your new product and exceeds all your expectations.

You can get more information about the maintenance of your product and warranty by scanning the following QR Code.




B

AXIS

Sconce Lamp

Instructions

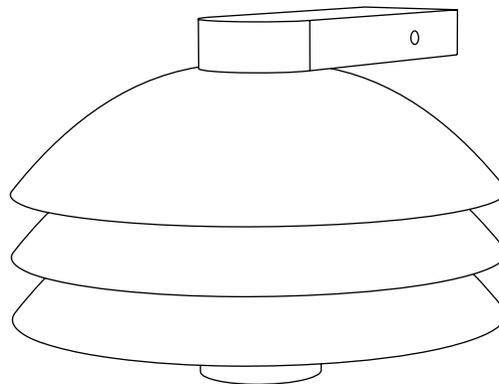

CDMX

Aristóteles 127
Polanco IV Sección Miguel Hidalgo
11550 CDMX, México

+52 555 087 2443

PUEBLA

Callejón del Cristo 2 Int. 6 A
Col. San José del Puente
72150 Puebla, Pue, México

+52 222 688 8442

Light Source

6 W G9 LED 600 lm
120 - 127 V ~ 60 Hz 0.07 - 0.05 A
2700 K
Included


Indoor Use

bandidostudio.com


Bandido

BULB REPLACEMENT


1

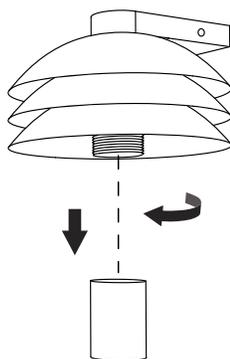


2

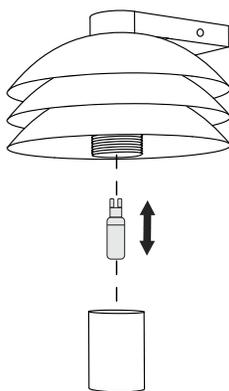

3

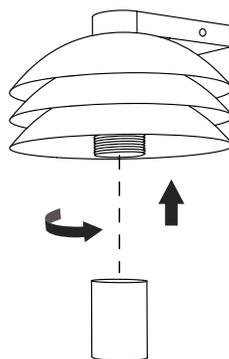

4

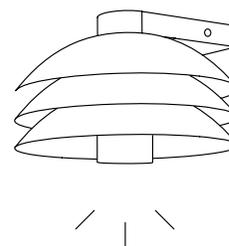

 Handle with care, fragile materials.

 Use only LED bulbs.

INSTALLATION GUIDE

Scence Lamp

We suggest that any electrical work be performed by a qualified specialist.



CAUTION: Turn off the power supply before executing any electrical installation.




Structural reinforcement is recommended for walls and ceilings made of drywall or other similar finishes.


Included Parts:

- | | | | |
|---|--------------------|---|---------------------|
|  | G9 bulb
1x |  | Thermofit
2x |
|  | Wall plugs
2x |  | Sujetador "8"
1x |
|  | Allen key
1x |  | Connector
1x |
|  | Support bars
2x | | |


GENERAL INSTALLATION DIAGRAM

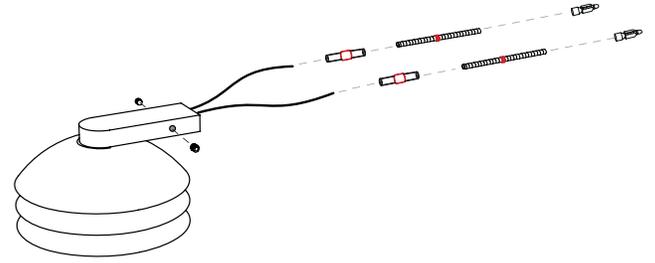


1 Install the wall plugs. Before drilling, mark the screw locations according to the **Fixing Template** and ensure they are horizontally aligned.

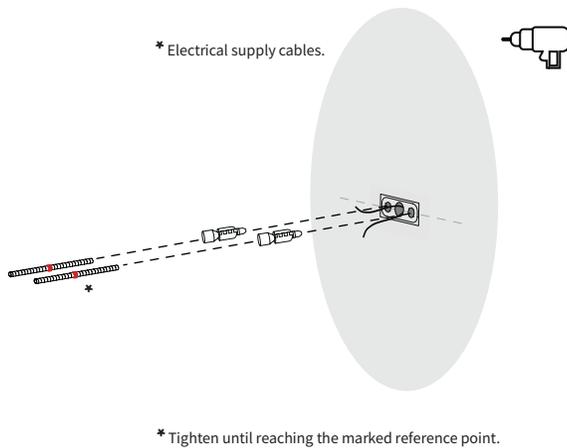


2 Connect + to + and - to - using the thermofit.

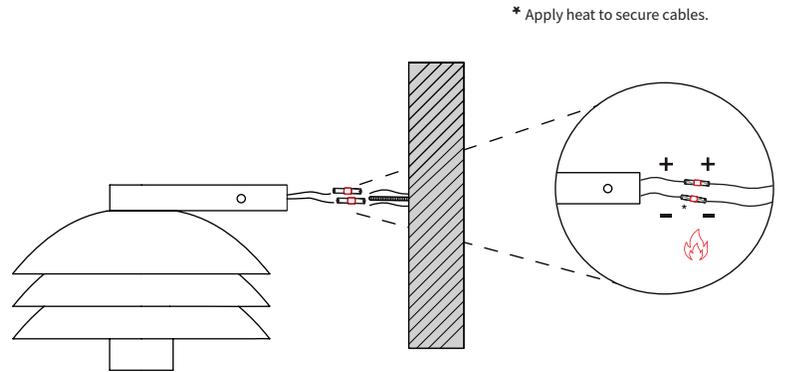

3 Insert the luminaire into the support bars.

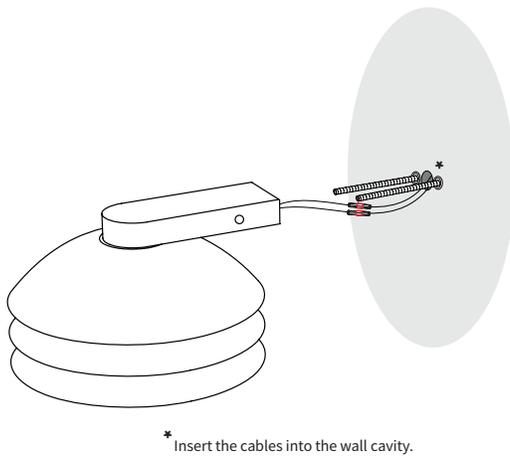

4 Secure the luminaire by tightening the set screws using the Allen key until properly fixed.

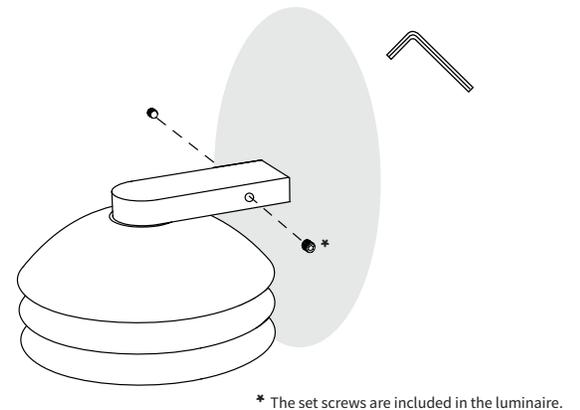

Handle with care, fragile materials.


TEMPLATE

PL07

AXIS Sconce Lamp

Installation guide

1. Place this template on the surface where the luminaire will be installed.
2. Align and level the template using the reference line.
3. Mark the drilling holes.
4. Drill.

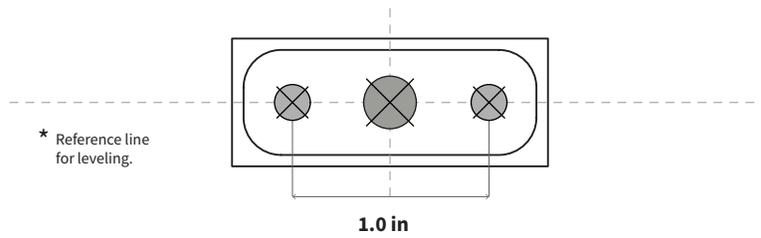

Scale 1:1



0.3 in

Bandido